



Access Control Configuration

SX2 & SX1 SERIES

How to change or remove your pin and add a card.

Steps to add a user pin.

Step 1 Enter master code *123456#

Step 2 Enter 1

Step 3 Enter new pin

Step 4 Enter #

Step 5 Enter * to exit programing

Steps to remove default pin

Step 1 Enter master code*123456#

Step 2 Enter 2

Step 3 Enter pin

Step 4 Enter #

Step 5 Enter * to exit programing